




SOS-AT
mode

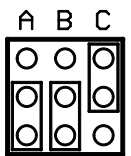


ServoAnim
mode

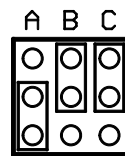

PROGRAM LOAD
mode

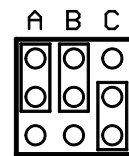

START
FOREVER

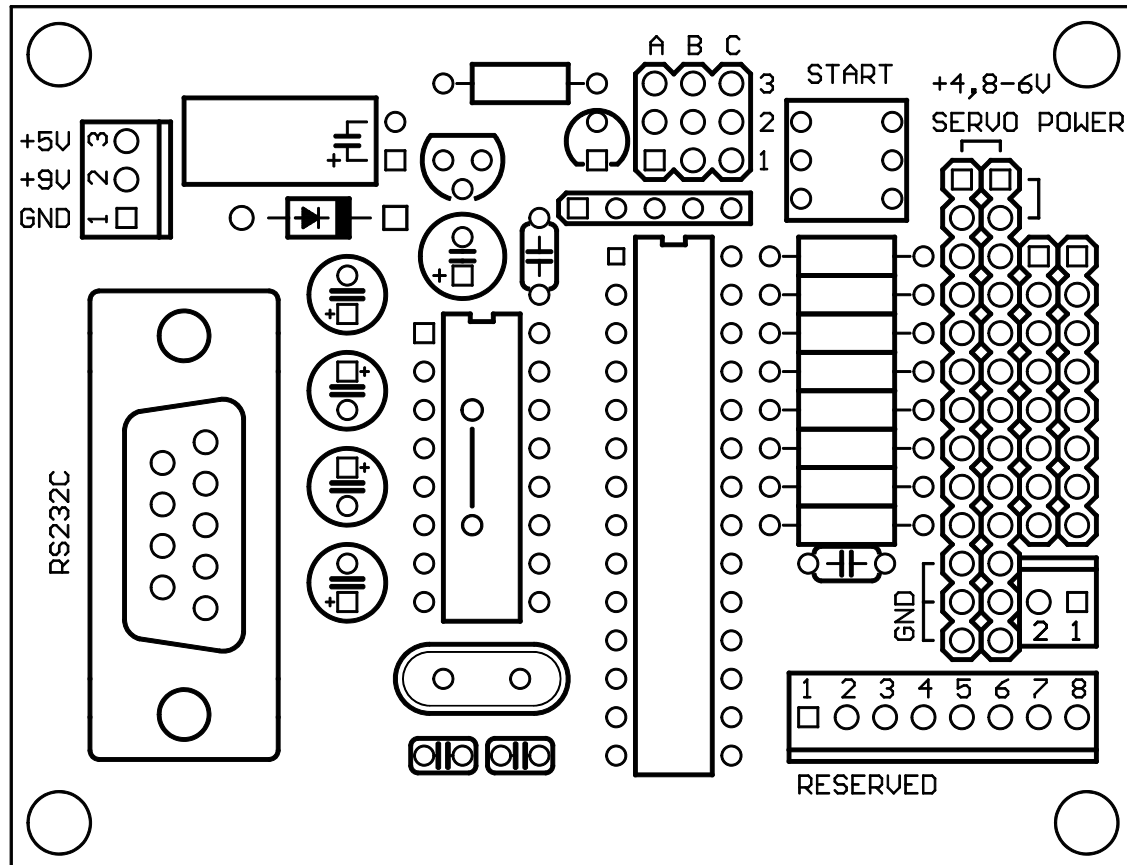

SERVO 8
SERVO 8
SERVO 7
SERVO 6
SERVO 5
SERVO 4
SERVO 3
SERVO 2
SERVO 1

1 GND
2 +4,8-6V